

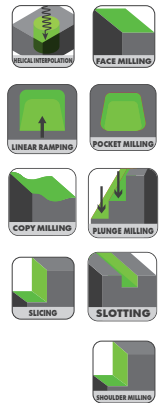


90P FEED

Aufsteckfräser 90° / XP.. 06
Face milling cutter 90° / XP.. 06

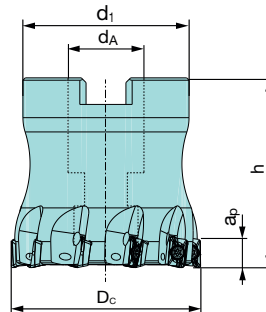

Abmessungen [mm] Dimensions [mm]							Artikelbezeichnung Item Code	Bestell-Nr. Order No	Verfüg. Availability	Ersatzteile Spare parts	
D _C	d _A	d ₁	h	ap/90	ap/HF	z				Spann- schraube Fastening screw HKE02- 29152 5001700 MA = 0,9Nm	Torx- Schlüssel Torque wrench IP6 5000600
32	16	25	40	5,2	0,7	8	HMF90 XP06.032 Z08	2239500	•		
40	16	35	40	5,2	0,7	10	HMF90 XP06.040 Z10	2239600	•		
50	22	43	40	5,2	0,7	11	HMF90 XP06.050 Z11	2239700	•		

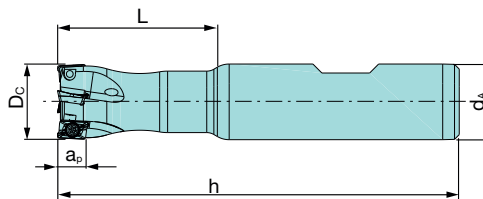

Abmessungen [mm] Dimensions [mm]							Artikelbezeichnung Item Code	Schaft Shank	Bestell-Nr. Order No	Verfüg. Availability	Ersatzteile Spare parts	
D _C	d _A	L	h	ap/90	ap/HF	z					Spann- schrau- be Fastening screw HKE02-29152 5001700 MA = 0,9Nm	Torx- Schlüssel Torque wrench IP6 5000600
10	10	28	80	5,2	0,7	2	HME90 XP06.010 Z02	SS	2210000	•		
12	12	30	80	5,2	0,7	3	HME90 XP06.012 Z03	SS	2210100	•		
16	16	35	85	5,2	0,7	4	HME90 XP06.016 Z04	SW	2210200	•		
20	20	40	90	5,2	0,7	5	HME90 XP06.020 Z05	SW	2210300	•		
25	25	50	106	5,2	0,7	7	HME90 XP06.025 Z07	SW	2210400	•		