



Einschraubfräser 90° / XP.. 06
Screw on type 90° / XP.. 06

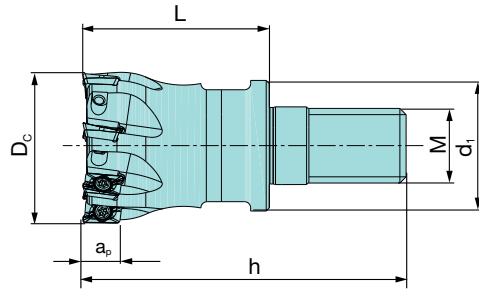

Abmessungen [mm] Dimensions [mm]								Artikelbezeichnung Item Code	Bestell-Nr. Order No	Verfüg. Availability	Ersatzteile Spare parts	
D _C	d ₁	L	h	ap/90	ap/HF	M	z					
10	9,8	15,5	30,5	5,2	0,7	6	2	HMS90 XP06.010 Z02-M6	2257200	•	Spannschraube Fastening screw HKE02-29152 5001700 MA = 0,9Nm	Torx-Schlüssel Torque wrench IP6 5000600
12	9,8	15,5	30,5	5,2	0,7	6	3	HMS90 XP06.012 Z03-M6	2257300	•		
16	13,8	20,5	38,5	5,2	0,7	8	4	HMS90 XP06.016 Z04-M8	2257400	•		
20	18	27	46	5,2	0,7	10	5	HMS90 XP06.020 Z05-M10	2257500	•		
25	21	30	52	5,2	0,7	12	7	HMS90 XP06.025 Z07-M12	2257600	•		
32	29	43	66	5,2	0,7	16	8	HMS90 XP06.032 Z08-M16	2257700	•		

Einschraubfräser 90° / XP.. 06 / INCH
Screw on type 90° / XP.. 06 / INCH

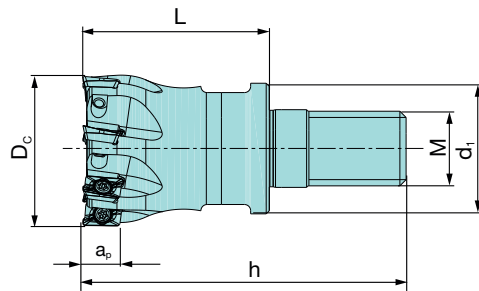

Abmessungen [INCH] Dimensions [INCH]								Artikelbezeichnung Item Code	Bestell-Nr. Order No	Verfüg. Availability	Ersatzteile Spare parts	
D _C	d ₁	L	h	ap/90	ap/HF	M	z					
0.75	0.71	1.06	1.81	0.204	0.027	10	5	HMSU90 XP06.0750 Z05-M10INCH	2264100	○	Spannschraube Fastening screw HKE02-29152 5001700 MA = 0,9Nm	Torx-Schlüssel Torque wrench IP6 5000600
1.00	0.71	1.06	1.81	0.204	0.027	12	7	HMSU90 XP06.1000 Z07-M12INCH	2264200	○		